FIRRIN

AR 232 EKMEK KIZARTMA MAKİNESİ

AR 232 TOASTER

AR 232 TOASTER

arzum®

KULLANMA KILAVUZU
INSTRUCTION MANUAL
GEBRAUCHSANWEISUNG

endüstriyel tasarım yarışmaları iki dünyadı BİRİNCİLİK ÖDÜLÜ

European consumer choice

950 W

3YIL ARZUM GARANTİSİ
3YEARS ARZUM WARRANTY
3JAHRE ARZUM GARANTIE

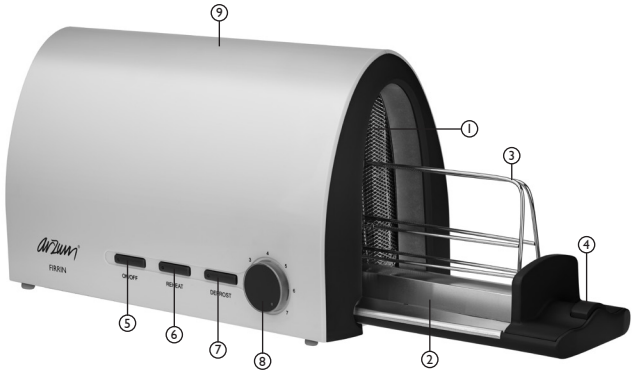

FIRRIN
AR 232 TOASTER

1. Toaster part
2. Sliding toaster and crumbs tray
3. Slice putting wire
4. Wire opening button
5. On/off button
6. Reheat button
7. Defrost button
8. 7 level adjustable temperature button and indicator light
9. Heat resistant body

Thank you for purchasing **Arzum** brand **Toaster**. We wish this product to make life easier for you, as with other **Arzum** products do.

In order to obtain utmost output from your appliance, please read carefully this user's manual and save it for further use.

IMPORTANT SAFEGUARDS

• Make sure that the voltage indicated on the **Arzum Fırrın Toaster** corresponds with the mains voltage in your home. Our company shall not be held liable for any failures owing to any discrepancy and such failures shall not be covered by the guarantee.

• Your appliance is for household use only. Do not use for industrial or commercial purposes.

• To prevent harming your appliance do not use extension cords that supply insufficient current.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision of instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

• Keep the appliance and its cord out of children less than 8 years old.

• Do not place your appliance over or near direct heat sources such as a stove or heating oven.

• Do not let cord hang over edge of a table or counter, or touch any other appliances or hot surfaces.

• Place the unit on a flat and fixed surface, which would be resistant to heat.

• After having used, remove the mains plug from the wall socket and allow cooling down; move only after it has completely cooled down.

• When not in use and before cleaning, disconnect the mains plug from power outlet.

• **NEVER** immerse the appliance into water for cleaning or any other purposes; do not let any water / water steam leak into the unit.

• Do not touch metal parts when in use.

• Avoid actions that may harm or damage the cord or plug of your device. To unplug the appliance, first hold the plug and **NEVER** pull by the cord.

• Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner, such as by dropping down, etc. Do not attempt to repair it by yourself. Immediately contact an **Arzum Authorized Service**.

Be careful in using only the original spare parts in your appliance.

• **NEVER** put large foods, metal folio packs or tools in the appliance. This may cause a risk of fire or electric shock.

• The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

• Use your appliance for its intended purposes as recommended.

NOTE: This appliances is not intended to be operated by means of an external timer or separate remote-control system.

CLEANING AND CARE

• Before starting cleaning, turn the device off and disconnect the mains plug from power outlet and allow it to cool down.

• Wipe the outside of the appliance with a clean and damp cloth. NEVER use abrasive cleansers.

• **NEVER** immerse the unit, its cord and plug in water or other liquids.

• After remove the crumbs, wipe the tray with a clean and damp cloth.

CAUTION

Because of its special design, hot air is occurs around the right and left part of your appliance while it is turn on. Accordingly, place your appliance at least 30cm far from the wall, curtains, door, window etc.

PROPERTIES OF ARZUM TOASTER

Adjustable Temperature Button:

• Your unit has a temperature setting with 7 levels. You can have warming, slightly, medium toasted, middle toasted or highly toasted bread.

On / Off button:

• Press the on/off button of your appliance for operate it. To stop toaster, press the on/off button again.

Defrost Button:

• If the bread is just taken from the refrigerator, push the Defrost button in order to deice, extending the toaster time.

NOTE: Defrost time length depens on heating level.

Reheat Button:

• If you want to reheat your bread you can press the Reheat button. This will heat the bread for 30 seconds only, disregarding the adjustable temperature button in any step.

USING YOUR APPLIANCE

NOTE: A slight smell and smoke may arise in the first operation of your appliance. This situation is normal and the odor should disappear after this initial preheating.

• Pull the sliding tray and remove it inside of your appliance.

• Open the wire by pressing the opening button and put the slices. Be careful, the thicknesses of the slices are similar.

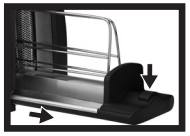

• After putting your slices to the tray, then place it inside the unit. If the tray is not place correctly it is not operate.

• Connect the mains plug to the wall socket and press the on/off button. Turn the temperature adjust button and adjust the temperature. The indicator lights red.

• When the temperature reaches the selected degree, 3 signals is heard; the indicator light goes off and your appliance is turn off automatically.

• After that, pull the tray inside of your appliance and press the wire opening button then take your toasted bread.

NOTE: Be careful to take your toasted bread because the wire will be hot.

• If you want to cancel toaster beforehand, push the on/off button and stop the operation.

NOTE: After toasted your bread if you reuse your product again before cooling, we suggest for reheat, adjust the temperature in a low stage because of less heating period.

• Unplug your appliance if you do not use it.

• The toasting degree of slice may vary according to the dough intensity and the humidity rate of your bread.

IMPORTANT: For security usage, your appliance is turn off automatically if the sliding tray is removed from its place.

Product life 7 years

Technical Specifications

220- 240 V~50 Hz

950 W

The product is in compliance with the WEEE Directives

WEEE

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Üretici / İthalatçı:
Manufacturer / Importer
Arzum Elektrikli Ev Aletleri San. ve Tic. A.Ş.
Otakçılar Caddesi No: 78 Kat: 1 B Blok No: B1b
Eyüp 34050 İstanbul Türkiye
Made in P.R.C.
Tel: +90 212 467 80 80 Fax: +90 212 467 80 00

ARZUM DANIŞMA MERKEZİ

444 1 800

GENEL DAĞITICI
ARZUM ELEKTRİKLİ EV ALETLERİ SAN. VE TİC. A.Ş.
Otakçılar Caddesi No: 78 Kat: 1 B Blok No: B1b
Eyüp 34050 İstanbul Türkiye
Tel: (0212) 467 80 80 Faks: (0212) 467 80 00
www.arzum.com arzum@arzum.com

AR232-160413